



REPLACEMENT SHEET

1/14

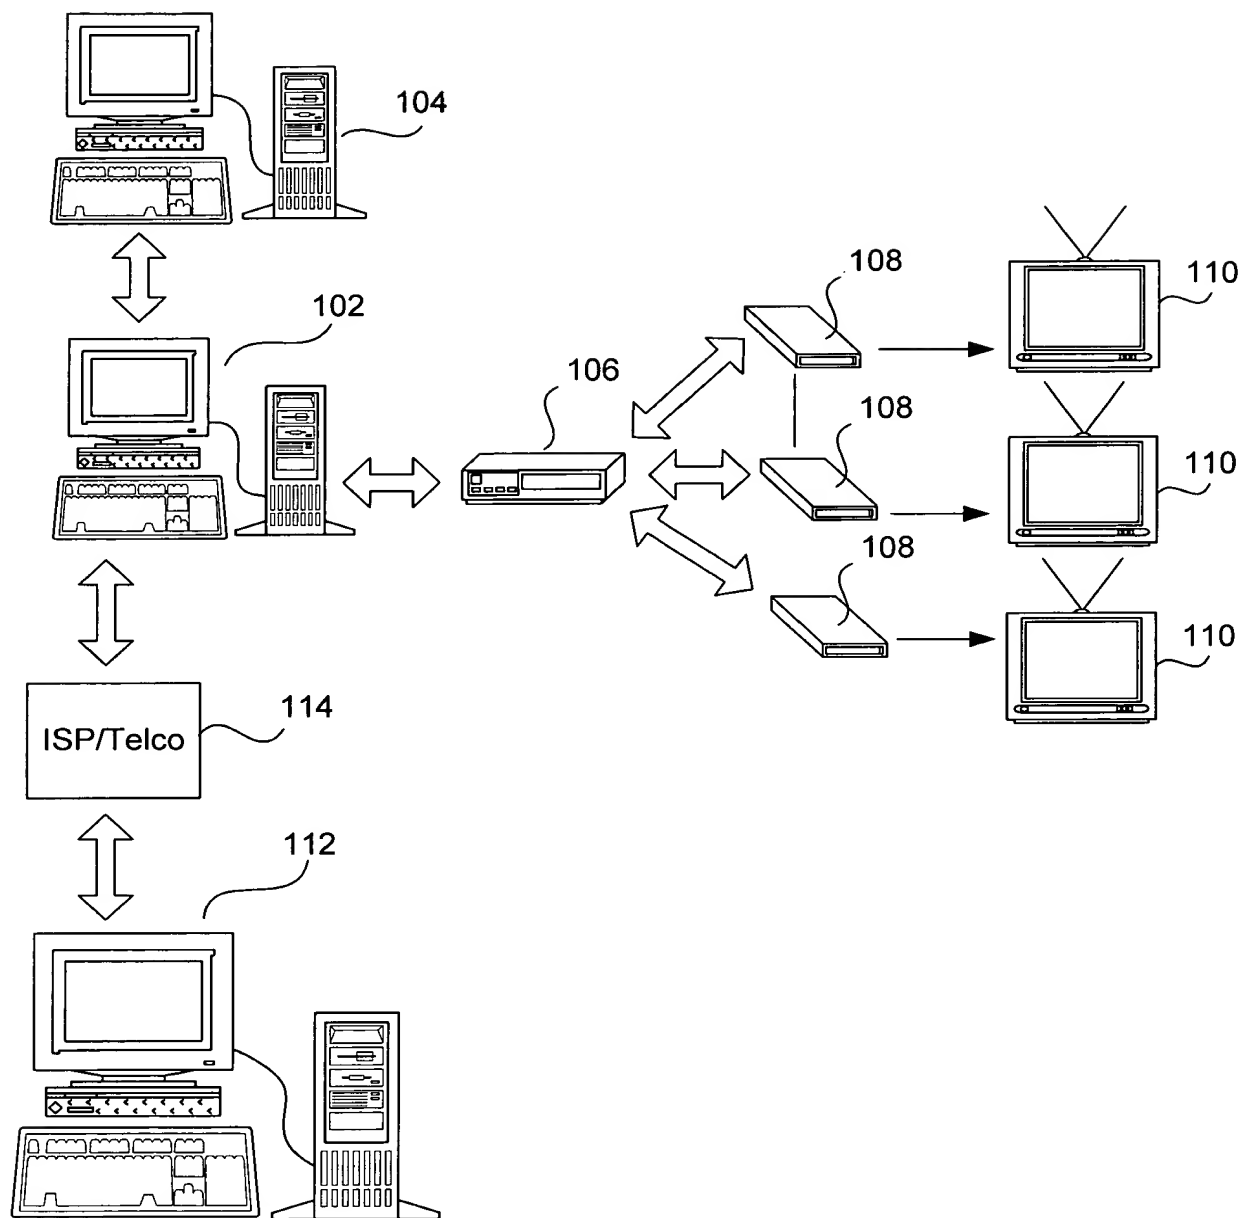


FIG. 1

REPLACEMENT SHEET

2/14

NEVCO VOD/KTV Set-top Box Board Layout

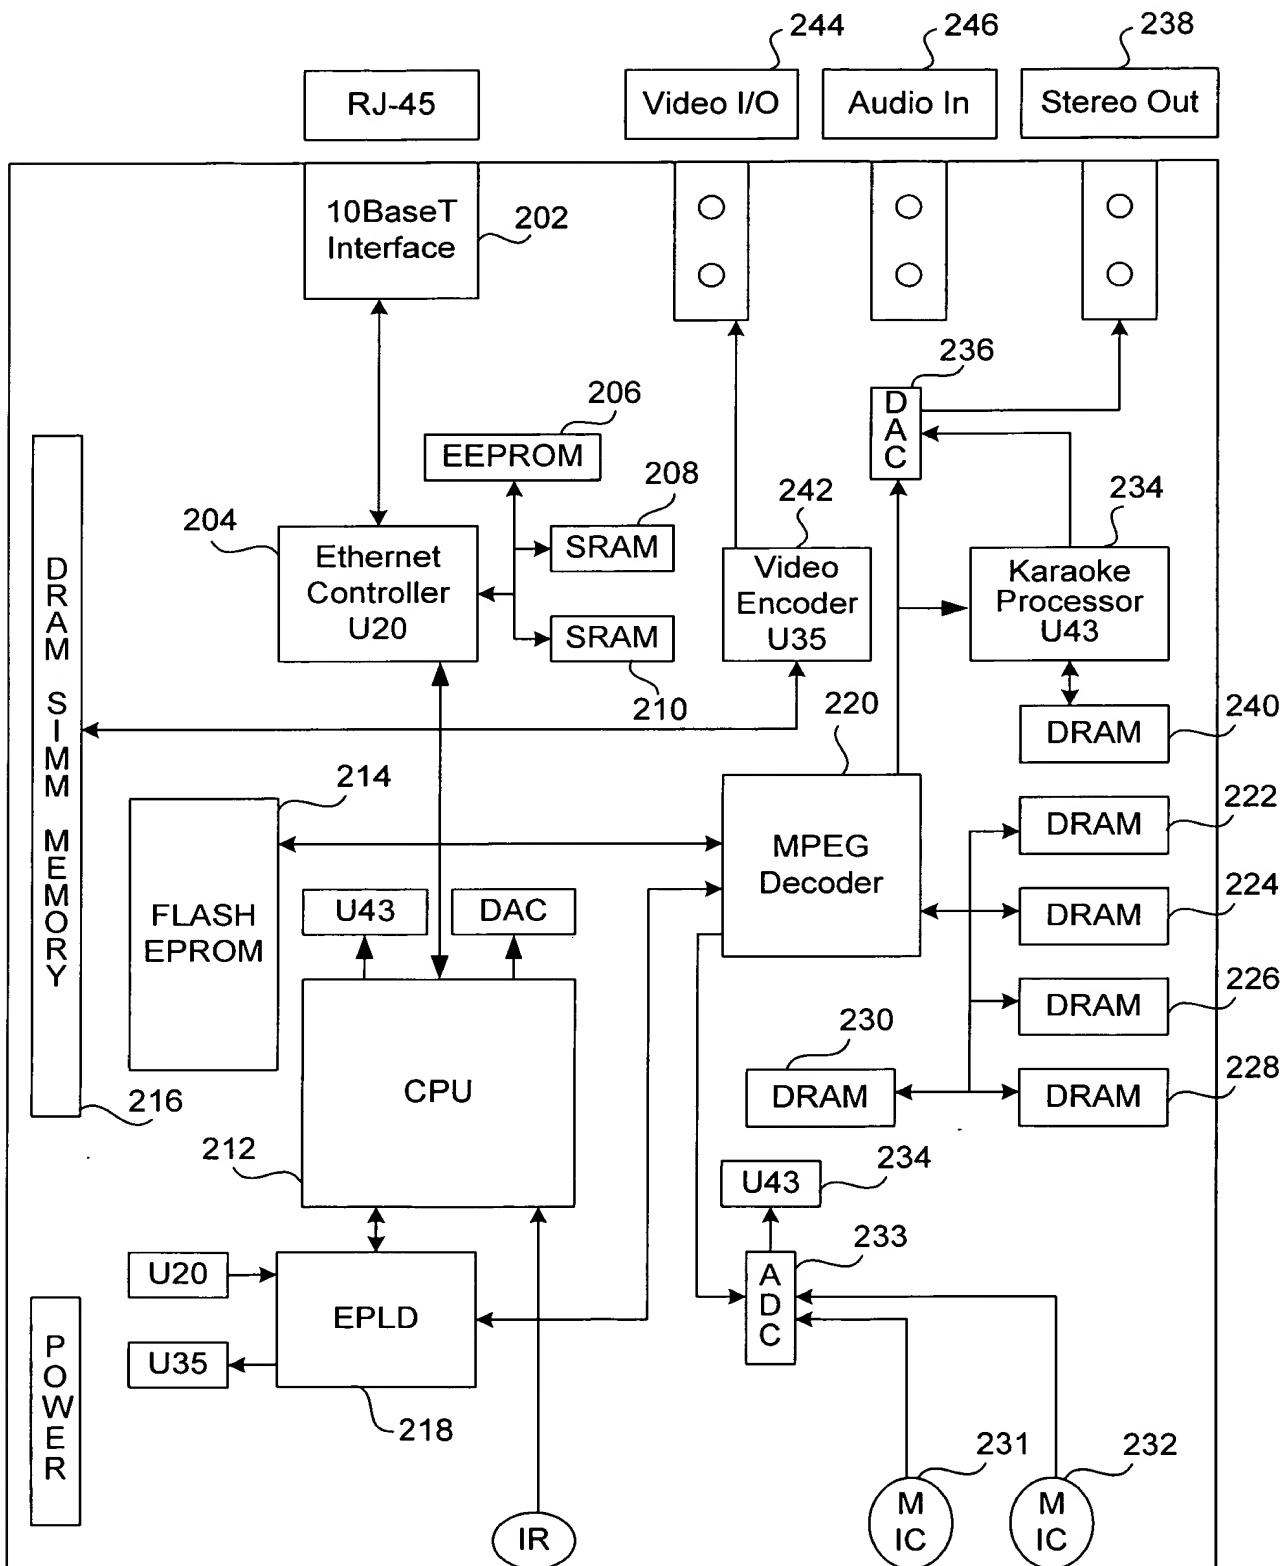



FIG. 2

REPLACEMENT SHEET

3/14

Examples of entering video titles:

Start-up TV screen

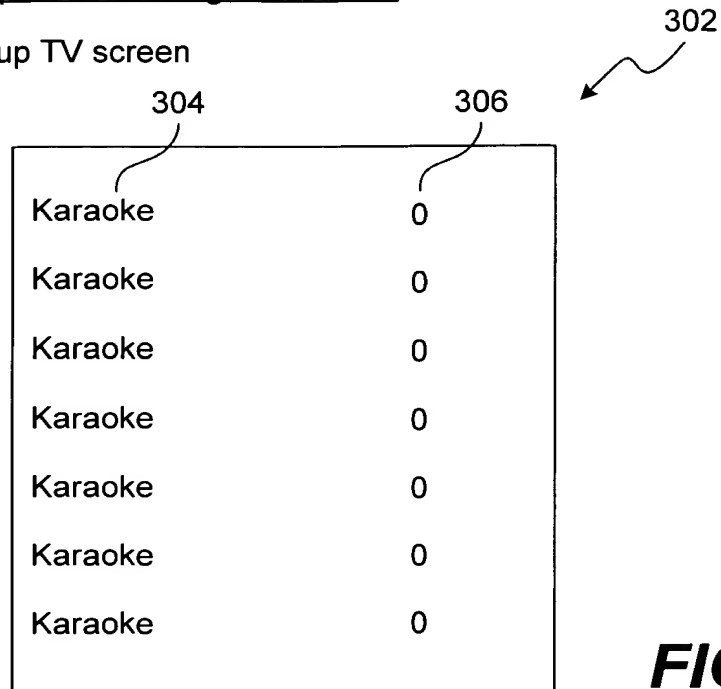


The diagram shows a rectangular TV screen labeled 302. Inside the screen is a table with two columns. The first column is labeled 304 and the second column is labeled 306. The table contains seven rows of data, all with the title 'Karaoke' and a count of '0'.

| 304 | 306 |
|---------|-----|
| Karaoke | 0 |
| Karaoke | 0 |
| Karaoke | 0 |
| Karaoke | 0 |
| Karaoke | 0 |
| Karaoke | 0 |
| Karaoke | 0 |

FIG. 3A

TV screen after all titles are entered.

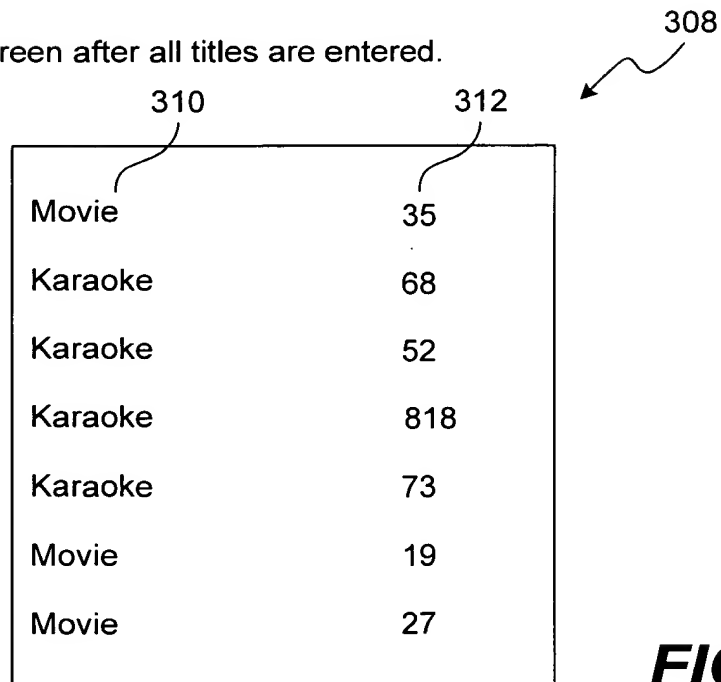

The diagram shows a rectangular TV screen labeled 308. Inside the screen is a table with two columns. The first column is labeled 310 and the second column is labeled 312. The table contains seven rows of data with various titles and counts.

| 310 | 312 |
|---------|-----|
| Movie | 35 |
| Karaoke | 68 |
| Karaoke | 52 |
| Karaoke | 818 |
| Karaoke | 73 |
| Movie | 19 |
| Movie | 27 |

FIG. 3B

REPLACEMENT SHEET

4/14

IR REMOTE CONTROL INSTRUCTIONS

The following diagram is the IR remote control key positions

| | | | |
|-----------------|------------------|--------------|----------------|
| TV/VIDEO 402 | NEXT 404 | | ENTER 406 |
| 1 414 | 2 416 | 3 418 | VOL + 456 |
| 4 420 | 5 422 | 6 424 | VOL - 458 |
| 7 426 | 8 428 | 9 430 | ECHO + 460 |
| NTSC/PAL 408 | 0 413 | RESET 410 | ECHO - 462 |
| | ↑ 432 | | FADER 464 |
| ← 436 | View/Menu 412 | → 438 | PITCH 466 |
| | ↓ 434 | SEEK 448 | HARMONY 468 |
| KEY - 450 | KEY N 454 | KEY + 452 | MUTE 470 |
| SLOW 442 | STEP 446 | PAUSE 444 | PLAY 440 |

Main Control Keys:

NTSC/PAL - Switches between NTSC and PAL modes. Default is PAL mode after power-up.

Reset - Reboots the set-top box.

Next - Stops the current video and starts the next video selected.

Enter - Press *enter* to change from karaoke to movie and vice versa.
Press *enter* to erase title 0.
Press *enter* after entering karaoke or movie title is completed.

View/Menu - After all karaoke or movie titles are entered, press this key to start playing video.

During video play, when this key is pressed, menu screen would come on and video titles can be added or edited.
Press this key again to start playing the video.

Up/Down/Right/Left arrow keys - Moves the cursor (indicated by gold color) up or down, right or left.

0-9 number keys - Numbers are used to identify video titles.

FIG. 4

REPLACEMENT SHEET

5/14

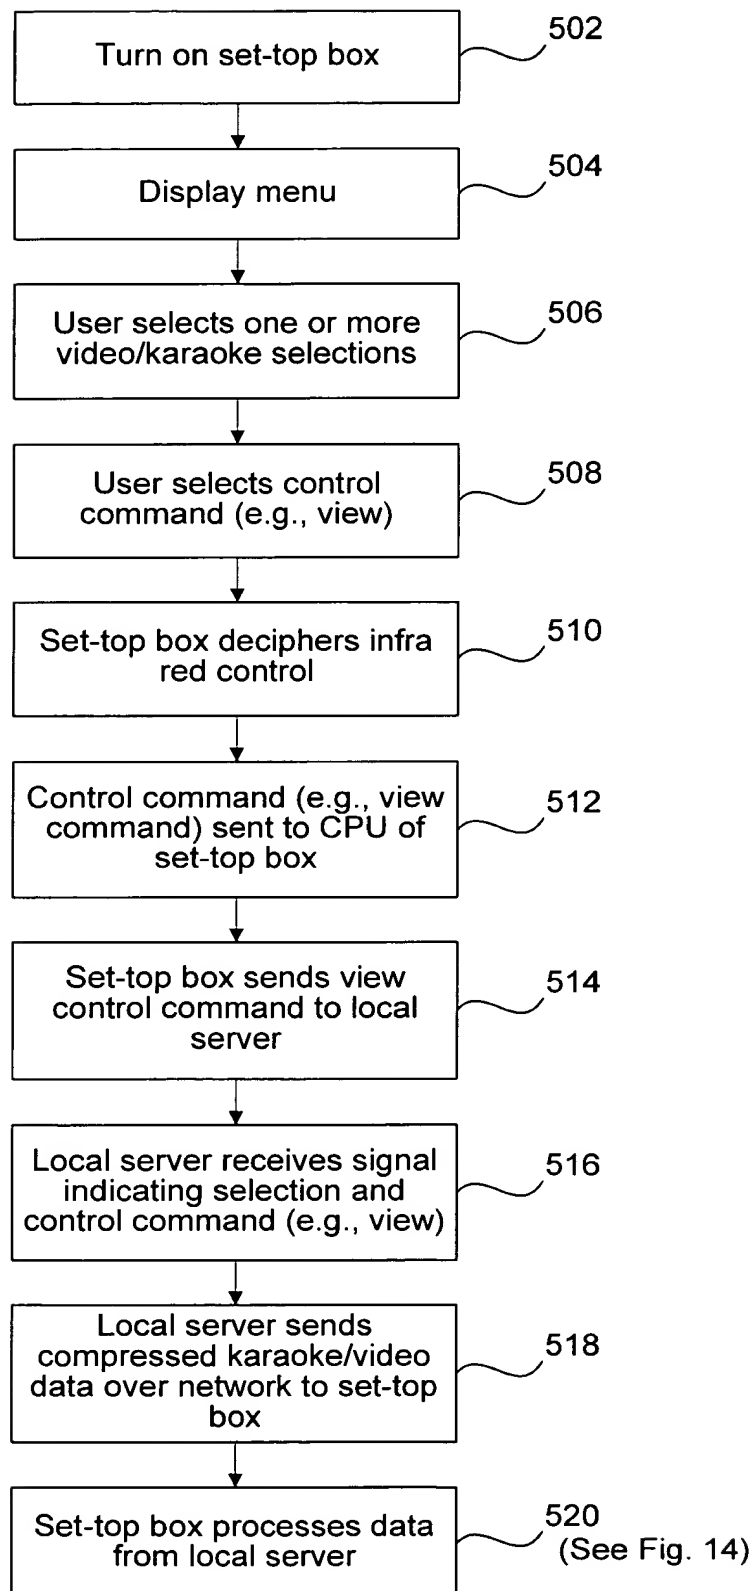


FIG. 5

REPLACEMENT SHEET

6/14

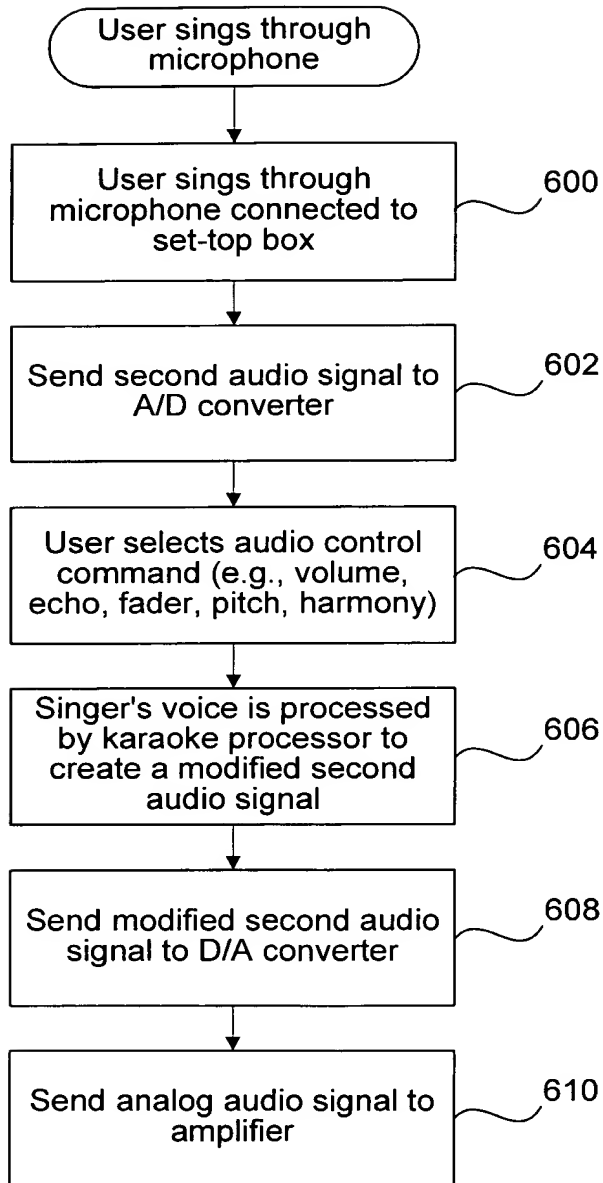


FIG. 6

REPLACEMENT SHEET

7/14

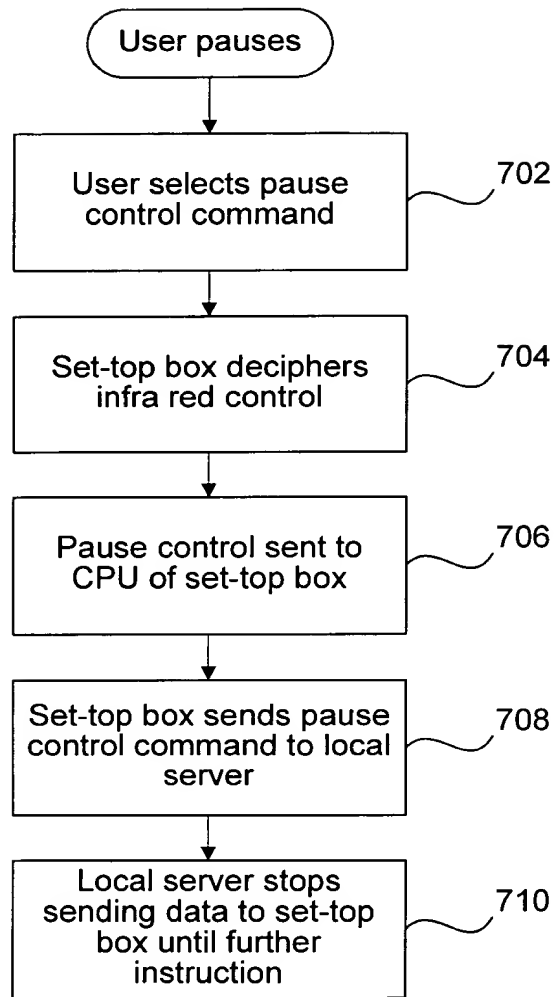


FIG. 7

REPLACEMENT SHEET

8/14

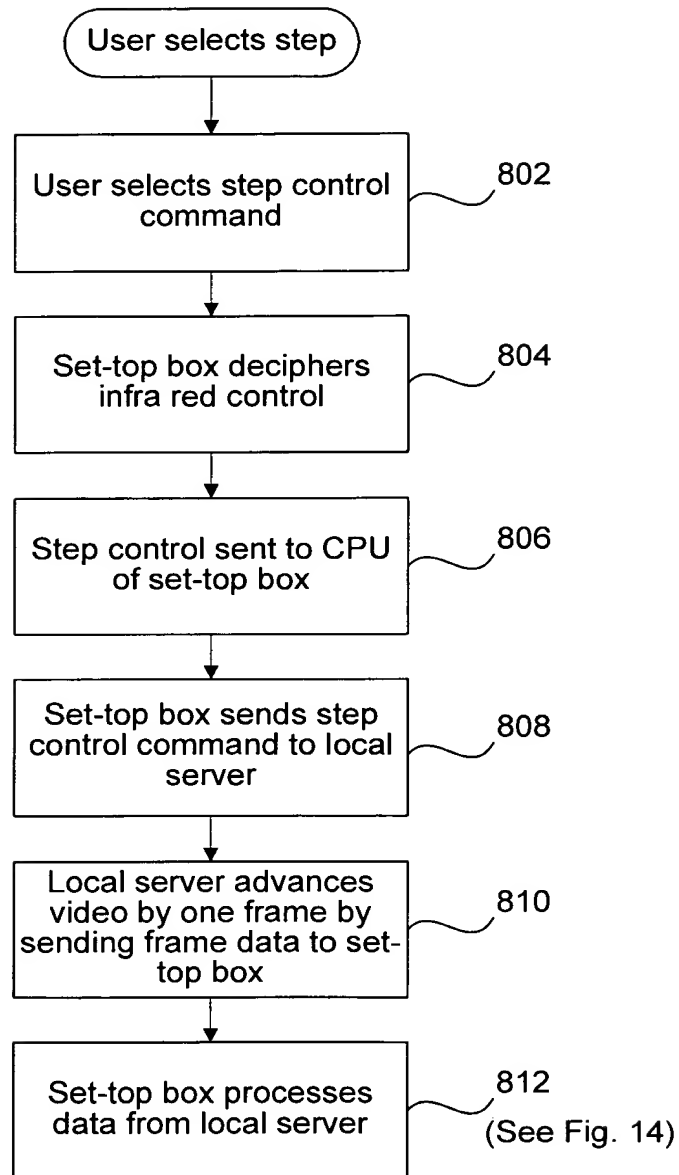


FIG. 8

REPLACEMENT SHEET

9/14

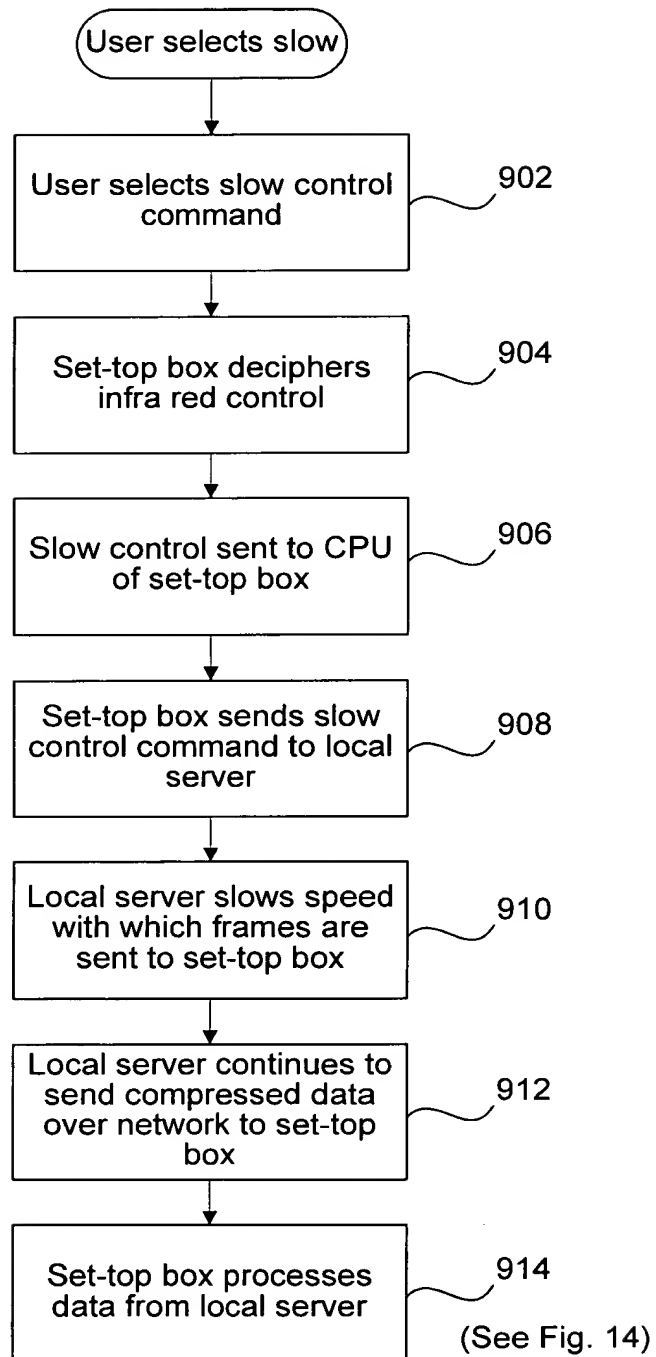


FIG. 9

REPLACEMENT SHEET

10/14

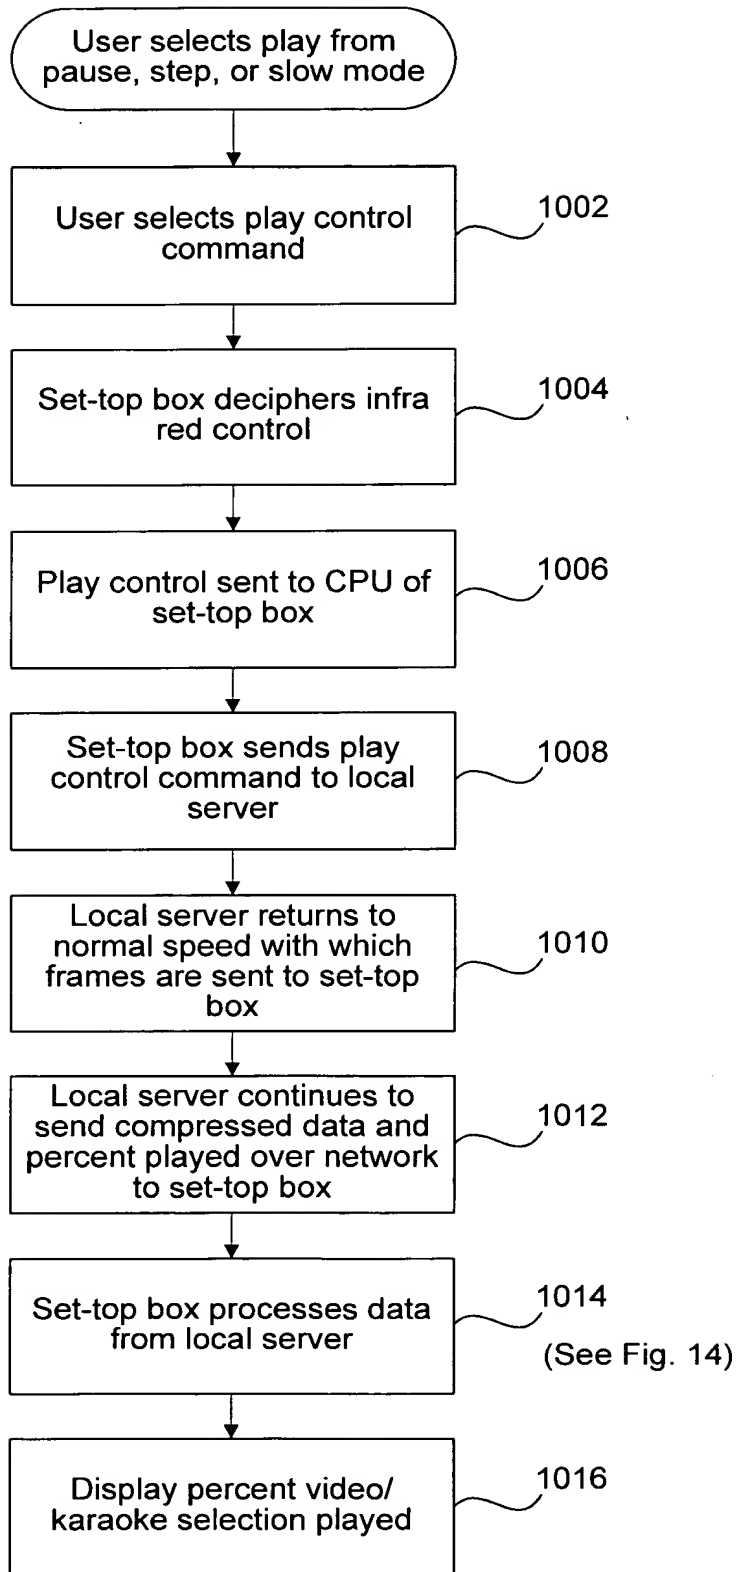
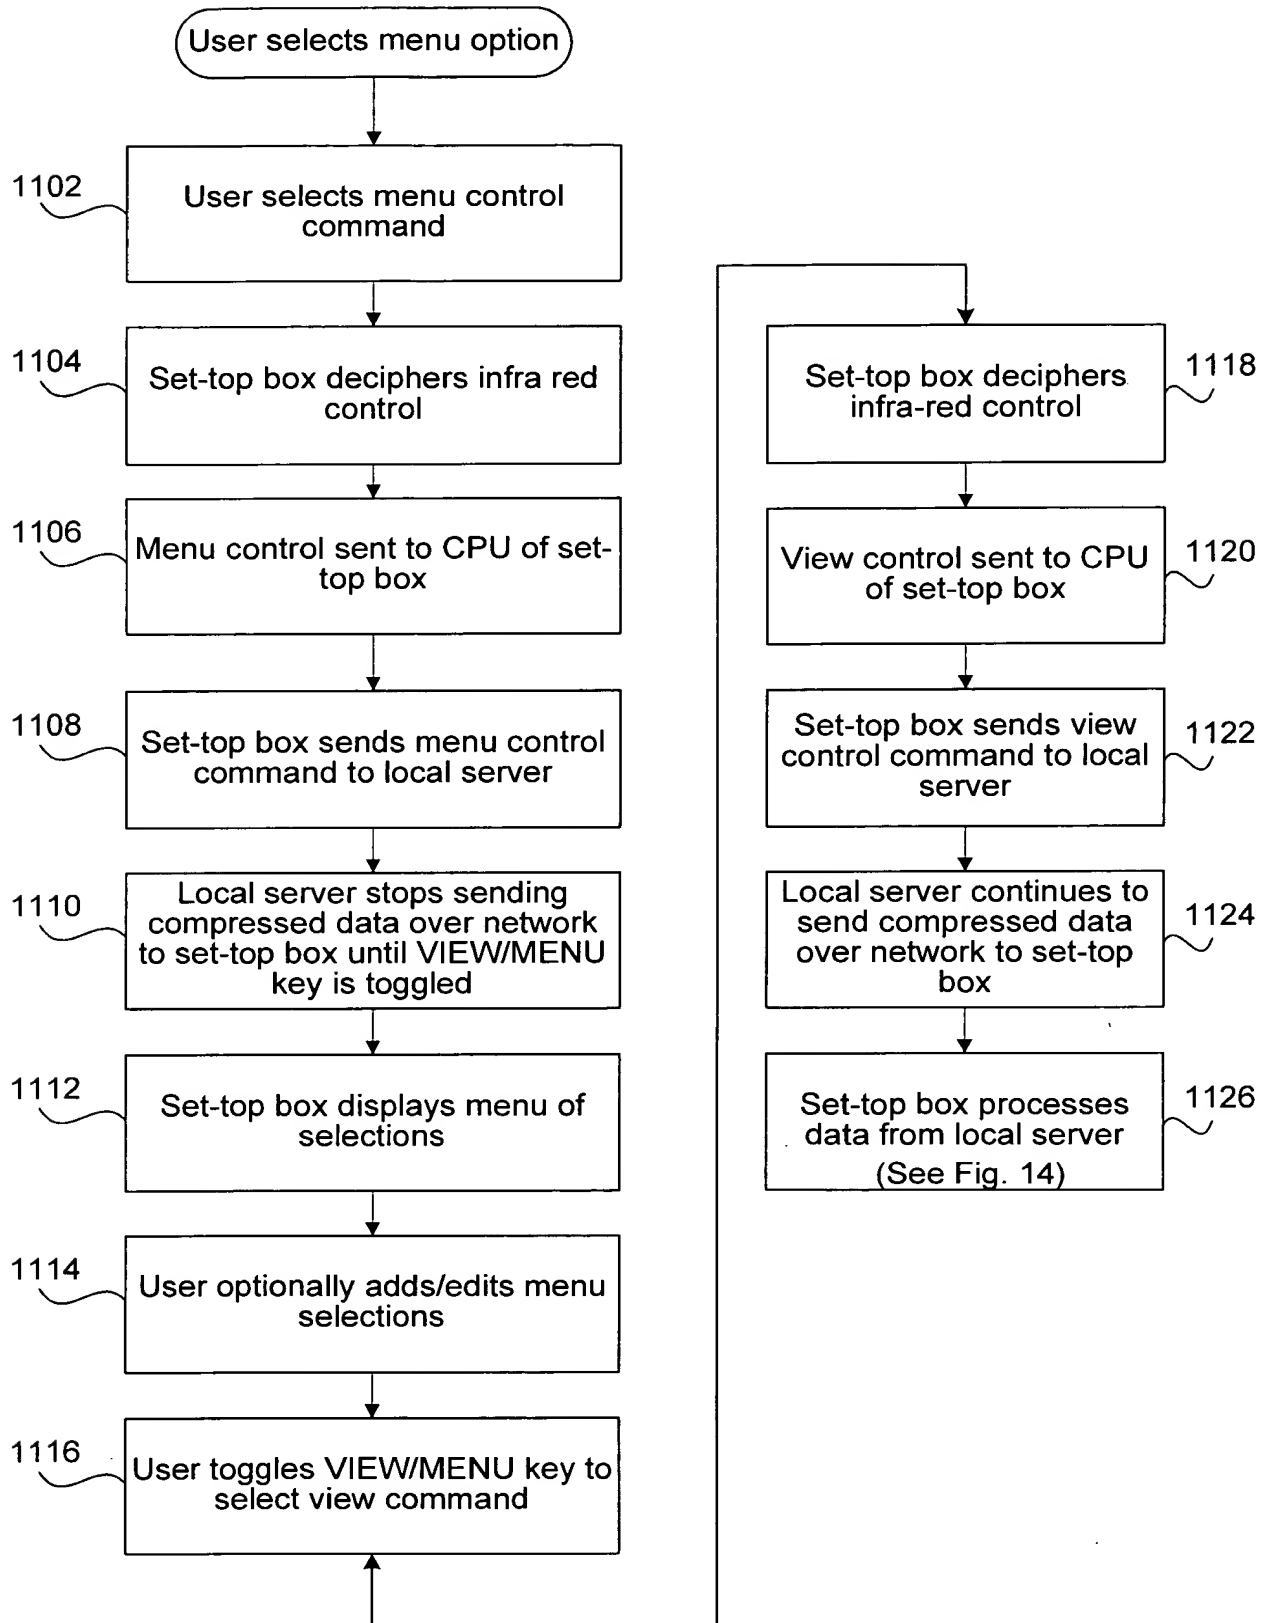


FIG. 10

**FIG. 11**

REPLACEMENT SHEET

12/14

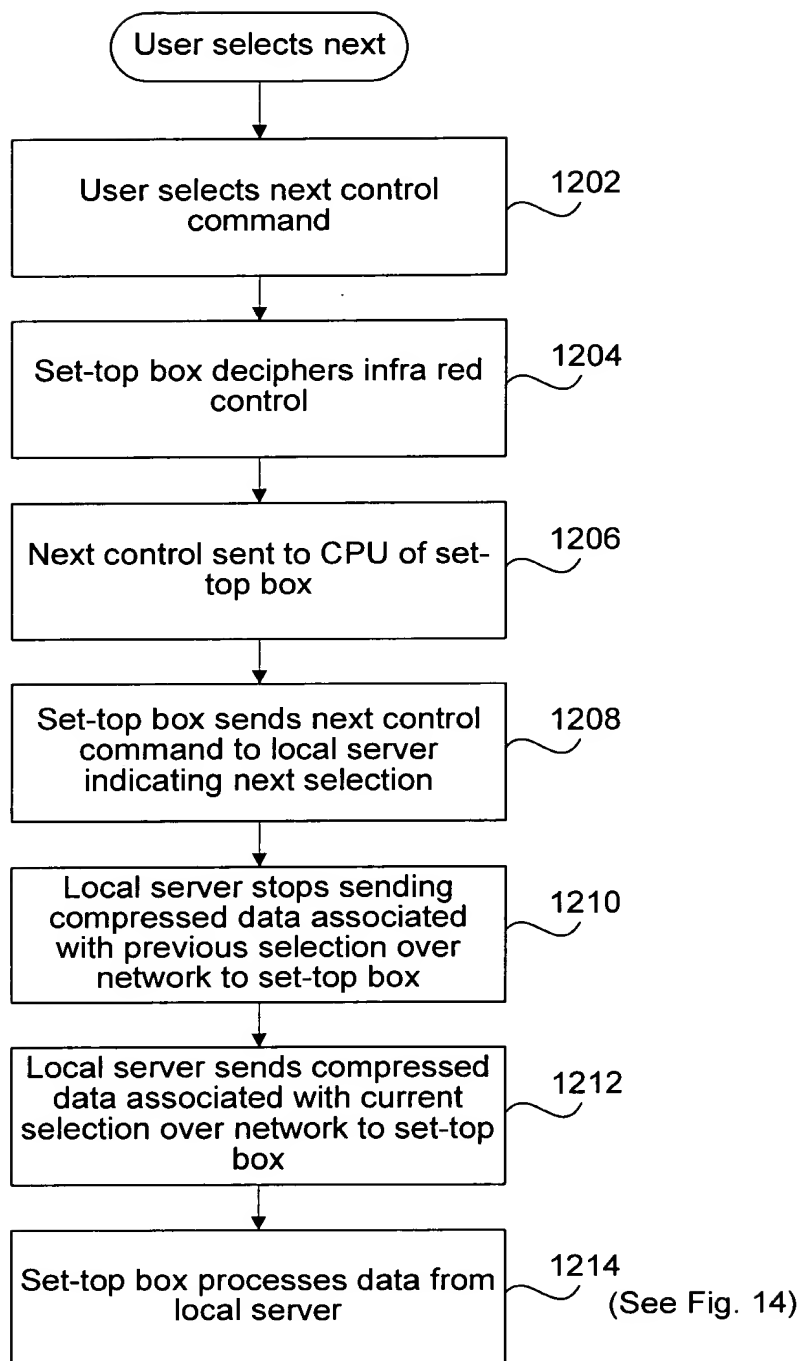


FIG. 12

REPLACEMENT SHEET

13/14

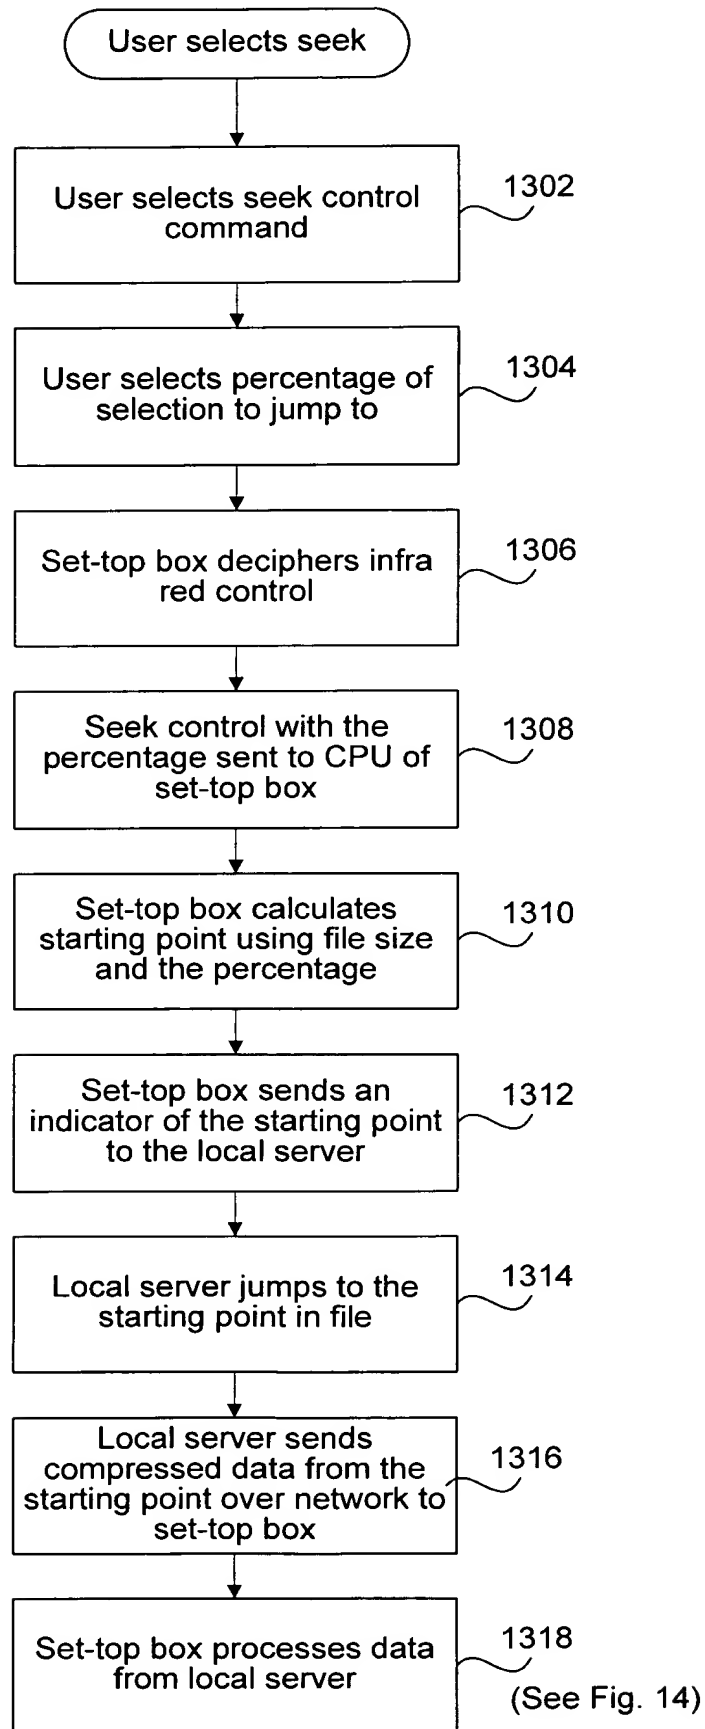


FIG. 13

REPLACEMENT SHEET

14/14

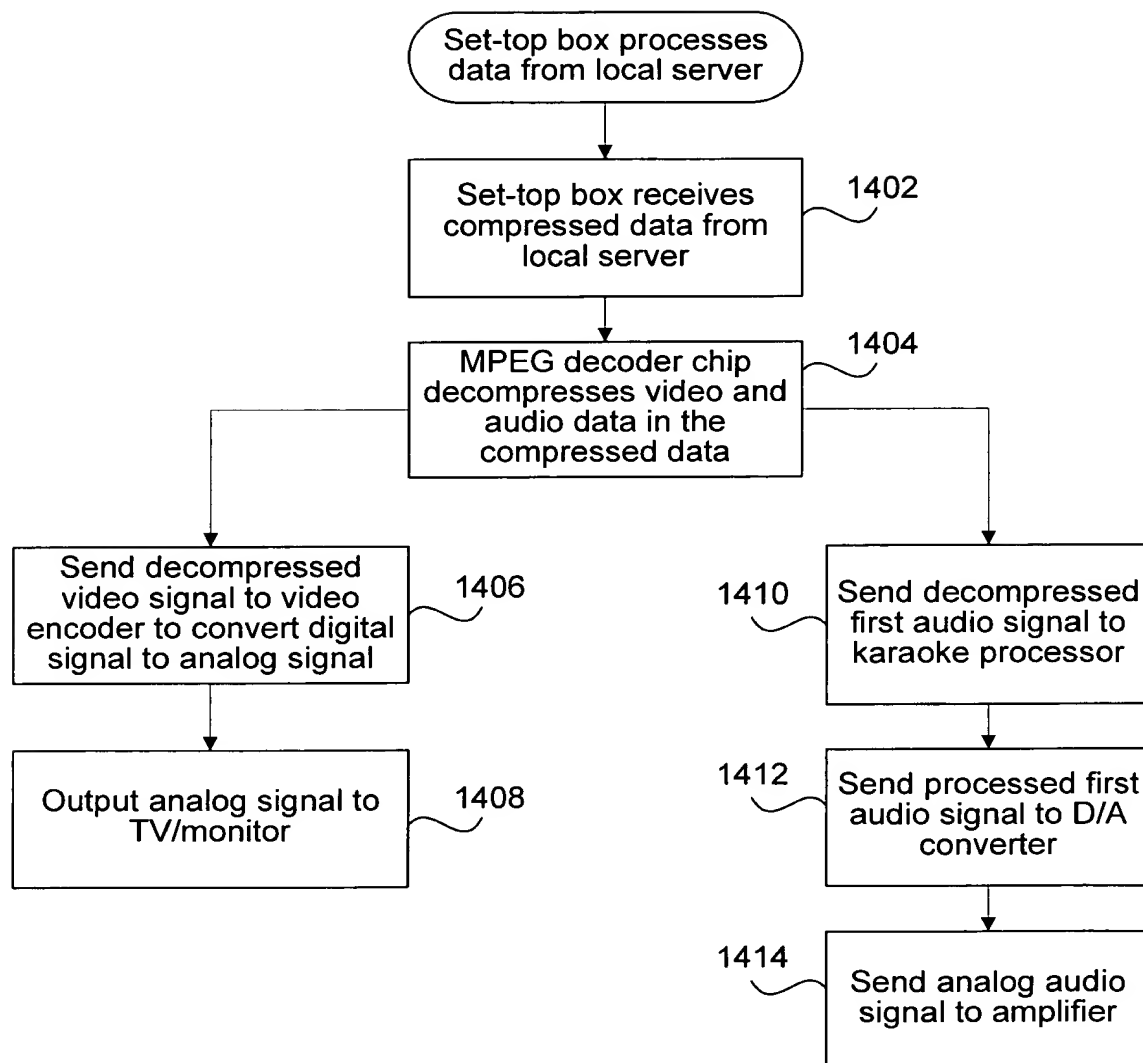


FIG. 14